





FORCE EDGE CONNECT Installation on Ubuntu without GUI

Version 240112

	Document: FORCE EDGE CONNECT - Installation on Ubuntu without GUI
□	Release date: 2024-01-12
G	Document version: 1
L ²	Author: FORCAM GmbH



Content

1	R	equirements	3
	1.1	User rights for installation	3
2	In	nstalling FORCE EDGE CONNECT on Ubuntu (without GUI)	4
	2.1	Download and unzip the FORCE EDGE installer	4
	2.2	User setup	5
	2.3	Installing the EDGE	6
3	A	ccessing the EDGE Configuration	11



1 Requirements

(i) Before installing, ensure that the system meets the system requirements. Details can be found in the System Requirements document for FORCE EDGE CONNECT.

1.1 User rights for installation

It is mandatory to create a non-root user.

The rights must be assigned to the user to be able to correctly install the application.

User:

- Must be a non-root user (name doesn't matter)
- This user must have the right to run the docker + docker compose command
- User ID while installing must be the ID of the current user (number):
 - o "id" (command)
- Add the current user into the Docker group:
 - "sudo usermod -aG docker \$USER" (command)



2 Installing FORCE EDGE CONNECT on Ubuntu (without GUI)

2.1 Download and unzip the FORCE EDGE installer

- 1. Open the Ubuntu VM, go to the desired directory and download the installer.
 - Run:

```
wget <URL of Installationfile> -O edge_installer.zip
```

Example:

wget https://thisIsAExampleLink.com/ -O edge_installer.zip

```
EcvoAI7an5JHrtKPytqjfHEB-jlflRvL32ihNi7V3jpD2A?download=1 -0 edge installer.zip/
-2022-05-23 11:25:06-- https://forcam-my.sharepoint.com/:u:/p/
/EcvoAI7an5JHrtKPytqjfHEB-jlflRvL32ihNi7V3jpD2A?download=1
Resolving forcam-my.sharepoint.com (forcam-my.sharepoint.com)... 13.107.138.9, 1
Connecting to forcam-my.sharepoint.com (forcam-my.sharepoint.com)|13.107.138.9|:
443... connected.
HTTP request sent, awaiting response... 302 Found
Location: /personal/
                                    forcam com/Documents/EDGE/Installer/ForceE
dgeInstaller-220516.zip?ga=1 [following]
-2022-05-23 11:25:06-- https://forcam-my.sharepoint.com/personal/
  forcam_com/Documents/EDGE/Installer/ForceEdgeInstaller-220516.zip?ga=1
Reusing existing connection to forcam-my.sharepoint.com:443.
HTTP request sent, awaiting response... 200 OK
Length: 3723488140 (3,5G) [application/x-zip-compressed]
Saving to: 'edge_installer.zip'
edge installer.zip 100%[======
                                       ---->]
                                               3,47G 93,4MB/s
2022-05-23 11:25:45 (94,1 MB/s) - 'edge installer.zip' saved [3723488140/3723488
140]
forcam@ffedgevm:~$
```

- For SharePoint links, remove everything behind the last "?" and ad "download=1"
- 2. Unzip the EDGE installer.
 - Run:

```
unzip <name of the installer>
```

Example:

unzip edge_installer.zip

```
forcam@ffedgevm:~$ unzip edge_installer.zip
Archive: edge_installer.zip
inflating: ForceEdgeInstaller-220516/installer.sh
inflating: ForceEdgeInstaller-220516/installer.bat
inflating: ForceEdgeInstaller-220516/HowToInstall.md
inflating: ForceEdgeInstaller-220516/ForceEdge-install.jar
forcam@ffedgevm:~$ [
```



2.2 User setup

- 1. Check the User ID of the login/created user.
 - Run:

Example:

```
forcam@forcam:~$ id
uid=1000(forcam) gid=1000(forcam) groups=1000(forcam),4(adm),24(cdrom),27(sudo),30(dip),46(plugdev),116(lxd)
forcam@forcam:~$
```

- 2. Add this user to the Docker group so that you can run the Docker command with this user.
 - Run:

```
sudo usermod -aG docker $USER
```

Example:

```
forcam@forcam:~$ sudo usermod -aG docker $USER forcam@forcam:~$
```

- 3. Verify that user is part of the <u>D</u>ocker group.
 - Run:

sudo cat /etc/group

Example:

```
messagebus:x:106:
input:x:107:
kvm:x:108:
render:x:109:
syslog:x:110:
tss:x:111:
uuidd:x:112:
tcpdump:x:113:
ssh:x:114:
landscape:x:115:
lxd:x:116:forcam
systemd-coredump:x:999:
forcam:x:1000:
docker:x:998:forcam
forcam@forcam:~$
```

- 4. Restart the system.
 - Run:

sudo reboot now



- 5. Check whether the current user has permissions to run Docker and Docker Compose.
 - Kun: docker version

Example:

```
Corcam@forcam:~$ docker version
Client: Docker Engine - Community
Version: 20.10.23
API version: 1.41
Go version: gol.18.10
Git commit: 7155243
                              Thu Jan 19 17:36:25 2023 linux/amd64
Built:
OS/Arch:
Experimental:
Server: Docker Engine - Community
  Version:
                               20.10.23
                              1.41 (minimum version 1.12)
gol.18.10
6051f14
  Go version:
Git commit:
  Built:
OS/Arch:
                               Thu Jan 19 17:34:14 2023 linux/amd64
 Experimental: containerd:
                               false
  Version:
GitCommit:
                               1.6.15
5b842e528e99d4d4c1686467debf2bd4b88ecd86
 runc:
Version:
  GitCommit:
 docker-init:
 Version:
GitCommit:
                              0.19.0
de40ad0
  rcam@forcam:~$
```

Run:

docker compose version

Example:

```
forcam@forcam:~$ docker compose version
Docker Compose version v2.15.1
forcam@forcam:~$
```

2.3 Installing the EDGE

- 1. Open the EDGE installer folder and make the installer.sh file executable.
 - Run: sudo chmod +x installer.sh
- 2. Start the installer.

Run:

./installer.sh

- 3. Accept license agreement by entering 1.
 - Run:

1



```
Price de las Drittequasiques de se Endoutres-Lizenzvertrages.

9.1 Carolle ist Drittequasiques dieses Endoutres-Lizenzvertrages.

9.2 Dez Endoutres rekennt an, dass die Programme einem beschenkten Nutzungsrecht unterliegen und nur in Verbindung mit dem Anwendungswete genutzt verden dürfen.

9.3 Einige Programme können einem Quelloode beinhalten, den Oracle bei der Auslieferung dieser Programme standardmäßig überlässt. Pür diesen Quelloode gelten die Bestimmungen dieses Endoutres-Lisenzvertrages.

9.4 Sofern Technologie von Dritten für den Einsatz einiger Oracle Programme stendardmäßig überlässt. Pür diesen Quelloode gelten die Bestimmungen dieses Endoutres-Lisenzvertrages.

9.4 Sofern Technologie von Dritten für den Einsatz einiger Oracle Programme sventueil gesignet oder erforderlich ist, gibt FÖRGAM dies in der Dokumentation zum Anwendungspaket oder den mendendungspaket oder den mendendungspaket den den Bendungspaket und den Bestimmungen des in der Dokumentation zum Anwendungspaket oder den medreveltig von TÖRCAM in Auwendungspaket oder den medreveltig von TÖRCAM in Lizenzvertrag für die Drittechnologie angegebenen Bestimmungen lizenziert. Die Bestimmungen aus diesen Endoutzer-Lizenzvertrag gelten insofern nicht.

His Den Bestimmungen aus Endoutzer-Lizenzvertrag gelten insofern nicht.

His Des Bestimmungen aus eine Endoutzer-Lizenzvertrag gelten insofern nicht.

His Des Bestimmungen aus diesen Endoutzer-Lizenzvertrag gelten insofern nicht.

His Des Bestimmungen aus der Endoutzer-Lizenzvertrag gelten insofern nicht.

His Des Bestimmungen aus den Endoutzer-Lizenzbedingungen von Kurcosoft-ISV Royalty-Produkten durch fÖRCAM gelten die Endoutzerlüzenzbedingungen von Kurcosoft-ISV Royalty-Produkten unter hollen der Severtiebe des Verhüben der Severtieben der Severtieben der Kurcosoft gelten der Severtieben der
```

- 4. Select the directory in which EDGE CONNECT is to be installed and confirm with ENTER.
 - Example:

```
Target Path

Select the installation path: [/home/forcam/EdgeInstaller]
```

- 5. Confirm with O and continue with 1.
 - Run:

0

Run:

1

Example:



```
Target Path

Select the installation path: [/home/forcam/EdgeInstaller]

Message

The target directory will be created: /home/forcam/EdgeInstaller

Enter O for OK, C to Cancel: 
O

Press 1 to continue, 2 to quit, 3 to redisplay
```

- 6. Enter User ID and confirm with ENTER.
 - Example:

```
User Data
Install/Update Configuration
User ID [1000]
```

- 7. Choose which parts of the EDGE you want to install by pressing 1 or 0 and confirm with enter, then continue with 1.
- for a complete application, at least one EDGE Configuration must be installed. EDGE Configuration and EDGE Node do not have to be installed on the same system.
 - Enter the required number and confirm with ENTER for each application.

To install the application run:

1

To NOT install the application run:

0

Confirm each application with enter

- To Continue after the selection run:
- Example :

```
[x] Install/Update Edge Configuration
Enter 1 to select, 0 to deselect:

[x] Install/Update Edge Node
Enter 1 to select, 0 to deselect:

[x] Install/Update Machine Repository
Enter 1 to select, 0 to deselect:

[] Install/Update SSL Certificates
Enter 1 to select, 0 to deselect:
1
```

8. Enter path for the certificates.



```
Edge SSL Certifications Upload

Edge Configuration[]
/home/edgeadmin/Downloads/EdgePmTestl/config.crt
Edge Node[]
/home/edgeadmin/Downloads/EdgePmTestl/node.crt
Machine Repository[]
/home/edgeadmin/Downloads/EdgePmTestl/machine-repo.crt

Press 1 to continue, 2 to quit, 3 to redisplay
```

- 9. Confirm Docker network settings with ENTER, then continue with 1.
 - Press ENTER
 - Run:
 - Example:

```
User Data

Edge Docker Network Setting

Docker network (10.10.1.1) [10.10.1]

Press 1 to continue, 2 to quit, 3 to redisplay
```

- 10. Select API Key and confirm with ENTER.
- The secret key should be safely stored for future use. It is needed to connect the EDGE Node to the EDGE Configuration.
 - Press ENTER.
 - Example:

```
Edge Settings

API Key []

SLF4J: Failed to load class "org.slf4j.impl.StaticLoggerBinder".

SLF4J: Defaulting to no-operation (NOP) logger implementation

SLF4J: See http://www.slf4j.org/codes.html#StaticLoggerBinder for further details.

Generated API Key: bMpkMERMEMTtRPk2Yvxaeg==
```

- 11. Confirm Ports with enter and continue with 1.
 - Press ENTER.
 - Run:



Example:

```
ForceEdgeQueue (Active MQ) management port [8161]

ForceEdgeQueue (Active MQ) connection port [61616]

ForceEdgeQueue (Active MQ) MQTT port [1883]

Configuration License Id []

Machine Repo License Id []

Press 1 to continue, 2 to quit, 3 to redisplay
```

12. Installation is starting.

13. After the installation is finished, the EDGE Configuration can be used.



3 Accessing the EDGE Configuration

- 1. To access the EDGE Configuration, enter https://{hostName}:60066 in the browser.
 - The **{hostName}** is the IP address or domain name of the server on which the EDGE Configuration is installed (e.g., https://**10.48.116.64**:60066).
- 2. After the initial installation, log in with the default user:

Email: test@mail.com Password: Force2020&k

information should be kept secure.

