



Version 5.10

Basics of Adapter for SAP

Manual

Document: **Manual - Basics of Adapter for SAP**

Created: **2018-02-15**

Last changes: **2019-10-31**

Author: **AEgilmez**



COPYRIGHT 2019 BY **FORCAM GMBH**, D-88214 Ravensburg
ALL RIGHTS RESERVED. COPY OR TRANSLATION, ALSO IN EXTRACTS
ONLY WITH WRITTEN PERMISSION BY FORCAM GMBH

Content

1	General Introduction	5
2	IDoc Basics.....	6
2.1	IDoc Terminologies.....	6
2.1.1	IDoc (Basic) Type.....	6
2.1.2	IDoc Extension	6
2.2	Steps in IDoc Configuration	6
2.2.1	The Outbound Process	7
2.2.2	The Inbound Process	7
2.2.3	Manage Table Entries	7
3	IDoc Structure and Records.....	8
3.1	General IDoc Structure	8
3.2	IDoc Records	8
3.2.1	Control Record (EDIDC)	8
3.2.2	Data Record (EDID4)	9
3.2.3	Status Records(EDIDS)	10
4	Interface Maintenance	11
4.1	Introduction	11
4.2	Searching IDocs in SAP	11
4.3	Testing and Editing IDocs.....	12
4.4	Converting IDoc Status (“Logical deletion”).....	12
4.5	Automatic/Immediate Processing.....	13
4.6	Reprocessing IDocs.....	14
4.6.1	Reprocessing IDoc Using BD87	14
4.6.2	Reprocessing IDocs Using /FFMES/IDoc_MON.....	15
4.7	Error Handling for Non-Posted IDoc.....	16
4.8	IDoc Deletion	17
4.9	Re-Send IDocs to FORCAM FORCE™	18
4.10	Mass Transfer of Orders to FORCAM FORCE™	19
5	Fine-Tuning the FORCAM FORCE™ Adapter for SAP	20
5.1	Table /FFMES/CONTROL_V.....	20
5.1.1	Functionality	20

5.1.2	Existing Parameters and Their Use	21
5.1.2.1	CHECK_IDoc_PRED - Check Activity Status of IDoc Predecessor	21
5.1.2.2	ACTIV_CLEAR_RES - Clear Open Reservations if Final Confirmation	21
5.1.2.3	ACTIV_NO_REMN_n - Indicator: No Remaining Activity Expected for Standard Value	21
5.1.2.4	ACTIV_SEQUENCES - Activate Sequences	21
5.1.2.5	ALLOW_BLK_PERD - Allow Booking in Blocked Period	21
5.1.2.6	CHECKLOCK_INACT - CHECK_LOCK Not Active	22
5.1.2.7	CHECK_AFOLG_S_D - Check Operations for Deletion and Insertion Entries	22
5.1.2.8	CHECK_COMPL_DWN - Check Complete Component Download	22
5.1.2.9	CHECK_DUMMY_ORD - Check for Dummy Orders	22
5.1.2.10	CHK_ACT_SYSID_x - Indicator: Active Check for SYSID	22
5.1.2.11	DONOTUSEF_xxx - Do Not Use xxx in Confirmations	22
5.1.2.12	INACTIV_FINCONF - Indicator: FIN_CONF Not Active if Final Confirmation	23
5.1.2.13	OPEND_TAR_ACTIn - Indicator: Determine Target Activity if OPEND - Standard Value n	23
5.1.2.14	POST_ALL_CONFIR - Post All MES Confirmations	23
5.1.2.15	QTYMG_TAR_ACTIn - Indicator: Determine Target Activity if QTYMG - Standard Value n	24
5.2	Table /FFMES/CONF_QTY (optional)	24
5.2.1	Main purpose	24
5.2.2	Functionality	24
5.2.3	Table Maintenance	25
5.3	Table /FFMES/CONST (optional)	26
5.3.1	Main purpose	26
5.3.2	Functionality	26
5.3.3	Table Maintenance	26
5.4	Table /FFMES/DELETE_PO (optional)	28
5.4.1	Main purpose	28
5.4.2	Functionality	28
5.4.3	Table Maintenance	29
5.5	Table /FFMES/FILTER (optional)	30
5.5.1	Main purpose	30
5.5.2	Functionality	30
5.5.3	Table Maintenance	31
5.6	Table /FFMES/SKIP_MSG (optional)	32
5.6.1	Main purpose	32
5.6.2	Functionality	32
5.6.3	Table Maintenance	32
5.7	Table /FFMES/STATUS (optional)	33
5.7.1	Main purpose	33

5.7.2	Functionality	33
5.7.3	Table Maintenance	34
5.8	Table /FFMES/STDVAL (optional).....	35
5.8.1	Main purpose.....	35
5.8.2	Functionality	35
5.8.3	Table Maintenance	36
6	Annex: Table of Figures.....	38

1 General Introduction

This manual has been written for end users of the FORCAM FORCE™ Adapter for SAP. It contains useful information for handling and successfully working with FORCAM software. Answers to the most common questions will be given and users can find basic hints for initial problem solutions and maintenance.

For more detailed information about the FORCAM FORCE™ Adapter for SAP, see the Adapter Customizing manual which is provided separately.

2 IDoc Basics

IDocs are structured ASCII files (or a virtual equivalent). They are the file format used by SAP R/3 to exchange data with foreign systems. This technique is a SAP standard feature and used in many communication scenarios.

IDoc is the acronym for Interchange Document (Intermediate Document). This indicates a set of (electronic) information which builds a logical entity. An IDoc is e.g. all the data of a single customer in your customer master data file, or the IDoc is all the data of a single invoice.

The FORCAM Adapter is using IDoc based communication with specific FORCAM developed IDoc basic types.

The information, exchanged by IDoc, is called as message and the IDoc is the physical representation of such a message. The name “messages” for the information sent via IDocs is used in the same ways as other EDI standards.

An IDoc is created by executing an outbound ALE or EDI process.

2.1 IDoc Terminologies

2.1.1 IDoc (Basic) Type

IDoc types are based on the EDI standards and mostly on EDIFACT standards.


Basic types (or IDoc types) define the structure of an IDoc. Each basic type describes standard IDoc segments, format of data fields and their size. Basic types also define the number of segments and fields in an IDoc. All the fields that are necessary for the transmission of a message for a particular object are mapped in different segments. It also defines the structure and relationship of IDoc segments along with mandatory and optional segments.

2.1.2 IDoc Extension

Basic type contains all the standard fields that are necessary for carrying out a business process. However, if any additional values are required to send to the partner, you can make use of the IDoc extension feature. IDoc extension is an extension of basic type and contains additional custom IDoc segments and fields that are not available in standard basic type.

The process of data transfer out of the SAP system is called outbound process, while that of data moving into the SAP system is called inbound process.

2.2 Steps in IDoc Configuration

 More detailed information about the FORCAM FORCE™ Adapter IDoc configuration can be found in the Adapter Customizing manual.

A complete interface setup requires additional table maintenance of FORCAM specific tables. Below are the basic standard configurations which are required as a prerequisite for ALE-IDoc setup.

- Logical system (transaction **SALE**)
- Setup RFC destinations (transaction **SM59**)
- Port definition (transaction **WE21**)

2.2.1 The Outbound Process

Steps involved:

1. Create segments (**WE31**).
2. Create an IDoc type (**WE30**).
3. Create a logical message type (**WE81**).
4. Associate a logical message type to IDoc type (**WE82**).
5. Create the function module or standalone program which will create the IDoc.
In the FORCAM Adapter, no message controlled IDoc creation is used.
6. Create a partner profile (**WE20**) with the necessary information in the outbound parameters for the partner you want to exchange the IDoc with.

2.2.2 The Inbound Process

Steps Involved:

1. Define process code (**WE42**).
2. Allocate the inbound function module to the message type (**WE57**).
3. Define the function module characteristics (**BD51**).
4. Create a partner profile (**WE20**) with the necessary information in the inbound parameters for the partner you want to exchange the IDoc with.
5. Set up ALIAS for IDoc XML service (**SICF**).

2.2.3 Manage Table Entries

Customizing tables for the FORCAM Adapter package are maintained via transaction **SM30**.

The following tables are customizing tables and are managed only via transport:

- /FFMES/GLOBAL
- /FFMES/VERTEILER
- /FFMES/KORR_CUST
- /FFMES/CONTROL_V

Following are all application tables that must be managed in each system. The contents of these tables are not transported:

- /FFMES/PARM
- /FFMES/CONTROL
- /FFMES/AUFTR
- /FFMES/FA_FELDER

3 IDoc Structure and Records

3.1 General IDoc Structure

The IDoc structure is divided into **Control Record**, **Data records** and **Status records**. These records are stored in the transparent tables in SAP. These are **EDIDC**, **EDID4** and **EDIDS**.


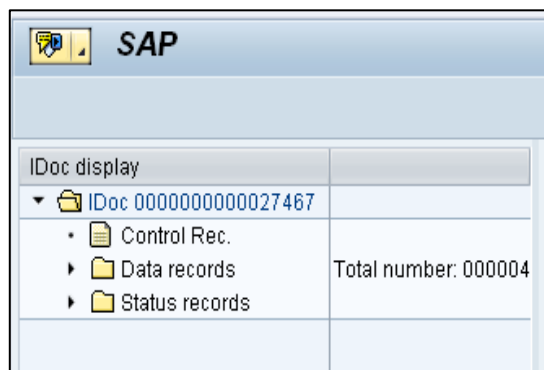


Fig. 1: SAP screen displaying the IDoc structure

3.2 IDoc Records

3.2.1 Control Record (EDIDC)

Contains information such as IDoc number, direction, IDoc status, basic type, message type, partner (sender/receiver), date and time of creation/update, interchange file or ISA number etc.

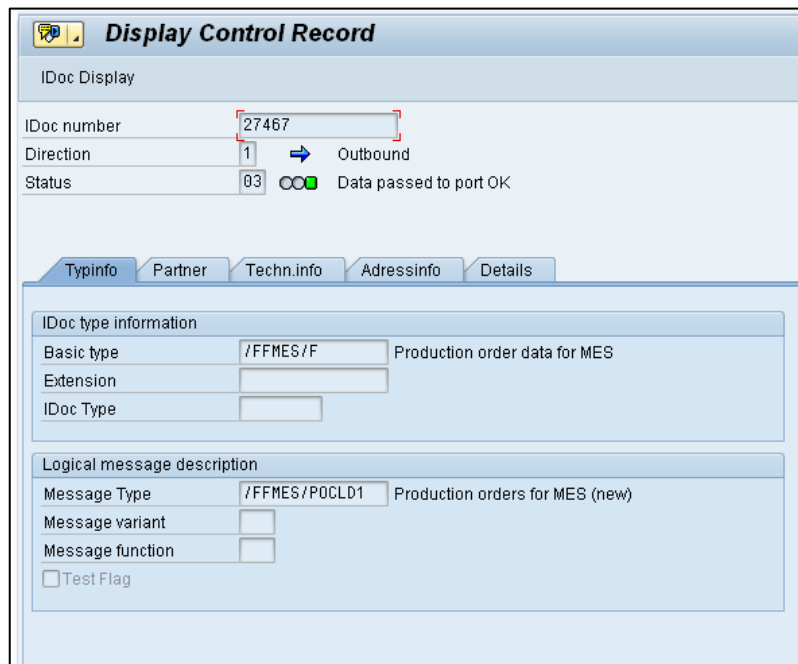

Display Control Record

IDoc Display

IDoc number: 27467

Direction: 1 → Outbound

Status: 03 Data passed to port OK

Typinfo Partner Techn.info Adressinfo Details

IDoc type information

Basic type: /FFMES/F Production order data for MES

Extension:

IDoc Type:

Logical message description

Message Type: /FFMES/POCLD1 Production orders for MES (new)

Message variant:


Message function:

☐ Test Flag

Fig. 2: Display Control Record screen

3.2.2 Data Record (EDID4)

Contains the details of the IDoc segments. An IDoc segment has fields that contain the data necessary for posting the documents.

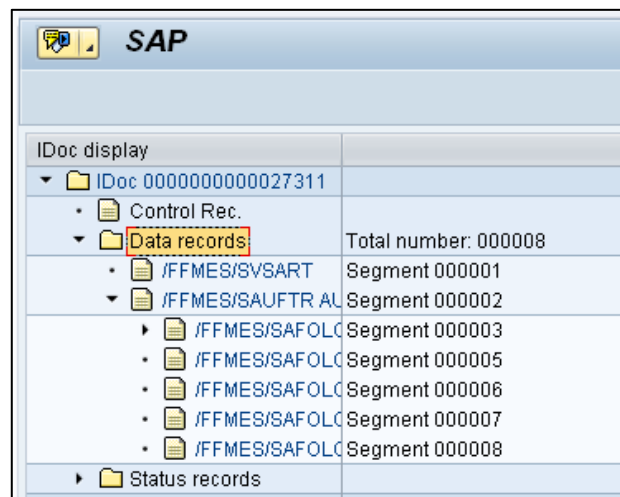


IDoc display	
▼ IDoc 0000000000027311	
• Control Rec.	
▼ Data records	Total number: 000008
• /FFMES/SVSART	Segment 000001
▼ /FFMES/SAUFTR AU	Segment 000002
▶ /FFMES/SAFOLC	Segment 000003
• /FFMES/SAFOLC	Segment 000005
• /FFMES/SAFOLC	Segment 000006
• /FFMES/SAFOLC	Segment 000007
• /FFMES/SAFOLC	Segment 000008
▶ Status records	

Fig. 3: SAP screen displaying Data Record

3.2.3 Status Records(EDIDS)

The IDoc status defines the processing status of the IDoc. IDoc statuses are used to track the IDoc and its various processing states. The status number represents the IDoc status. The current sequence of all the statuses an IDoc has passed through are found in **Control Record**.

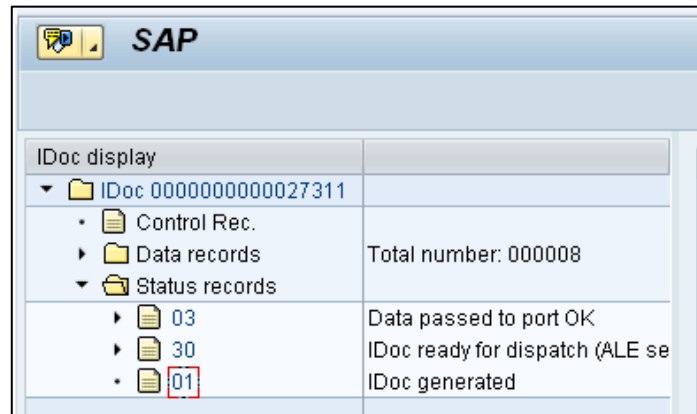

IDoc display	
▼ IDoc 00000000000027311	
• Control Rec.	
▶ Data records	Total number: 000008
▼ Status records	
▶ 03	Data passed to port OK
▶ 30	IDoc ready for dispatch (ALE se
• 01	IDoc generated

Fig. 4: SAP screen displaying Status Record

4 Interface Maintenance

4.1 Introduction


The FORCAM Adapter is an IDoc based interface which is a typical batch processing. User action is only required in IDoc monitoring, error handling or supervisor activities.

4.2 Searching IDocs in SAP

Transaction code WE02/WE05: General Search

IDocs can be viewed in the system via transaction codes **WE02** and **WE05**.

If the IDoc number is not known, the search can be made based on IDoc date, direction, basic type, message type, and partner number.

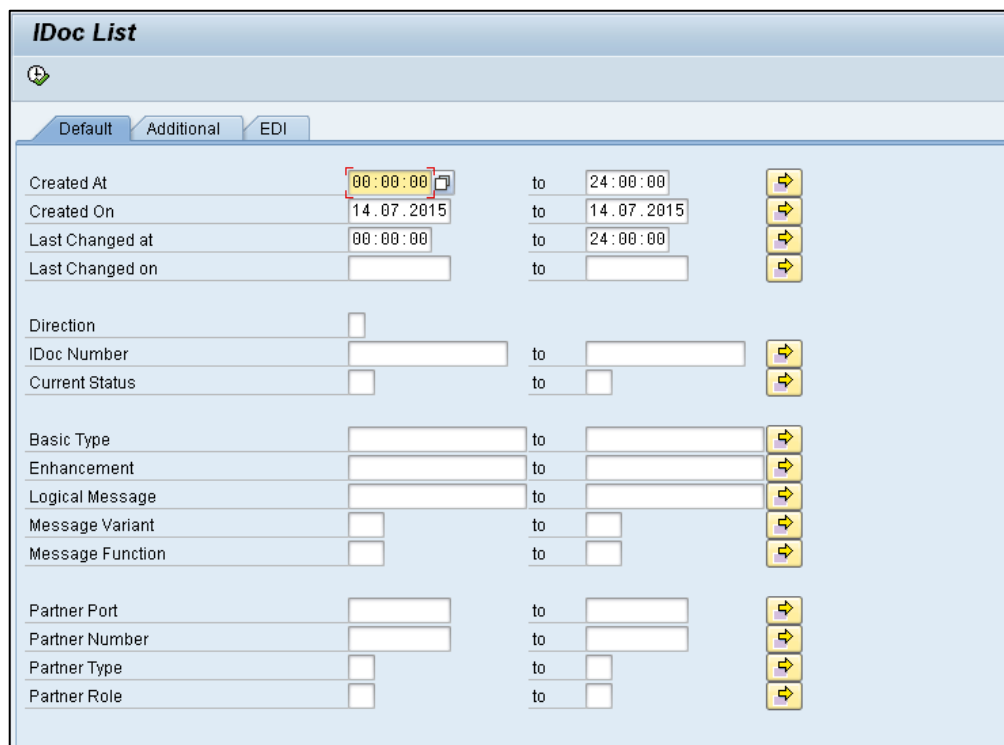

IDoc List		
Default Additional EDI		
Created At	00:00:00	to 24:00:00
Created On	14.07.2015	to 14.07.2015
Last Changed at	00:00:00	to 24:00:00
Last Changed on		to
Direction		
IDoc Number		to
Current Status		to
Basic Type		to
Enhancement		to
Logical Message		to
Message Variant		to
Message Function		to
Partner Port		to
Partner Number		to
Partner Type		to
Partner Role		to

Fig. 5: SAP Screen IDoc List

4.3 Testing and Editing IDocs

If an IDoc contains error in the data, such IDocs can be edited using transaction code **WE02** or **WE05**. When an IDoc is edited, the original IDoc information (backup) is saved in a new IDoc under status **70** (inbound)/**33** (outbound). These IDocs remain in the system for reference only. The status of the edited IDoc becomes **69** (inbound) and **32** (outbound).

Debugging of IDocs can be done using transaction code **WE19**.

WE19 is a test tool for IDoc processing. WE19 copies the existing IDoc and creates a new IDoc, which can then be modified as per testing needs.

4.4 Converting IDoc Status (“Logical deletion”)

Status **68** means “No further processing”. This status prevents an IDoc from being booked. Any reprocessing job will not consider those IDocs and IDocs are no longer in error state (red).

Logical IDoc deletion may be helpful in some cases where IDoc cannot be processed anymore. This can happen e.g. if the booking period had already been locked or any wrong booking was tried.

There are different options to change IDoc status:

1. SAP standard report **RC1_IDoc_SET_STATUS**

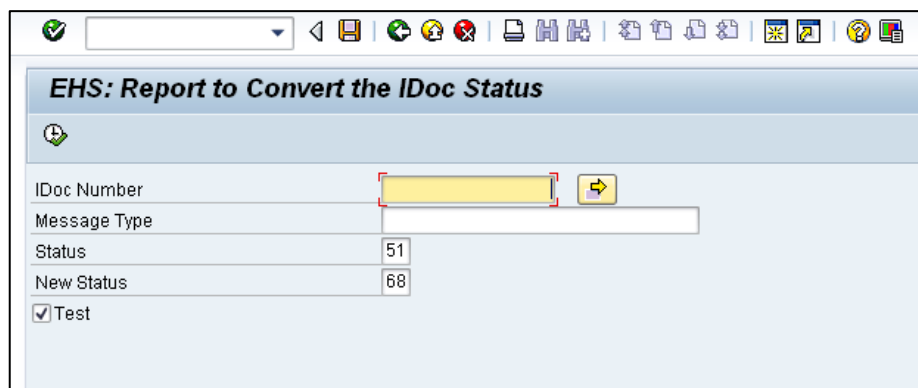



Fig. 6: Selection Screen of Report RC1_IDoc_SET_STATUS

2. Report **/FFMES/IDoc_DELETE** (for more details see section 4.8)

4.5 Automatic/Immediate Processing

IDoc processing by background job is the most preferred way of processing IDocs. Process code refers to a workflow or a function module which helps in reading or writing data from/to the IDoc. Process codes provided with the FORCAM Adapter must be configured in the system to process the inbound and outbound IDocs.

In this case, IDocs are processed immediately as they are generated or added in the system. The radio button **Transfer IDoc immediately** is selected in outbound options and **Trigger Immediately** is selected in inbound options. These checks are generally used when the real-time information exchange is necessary between two systems.

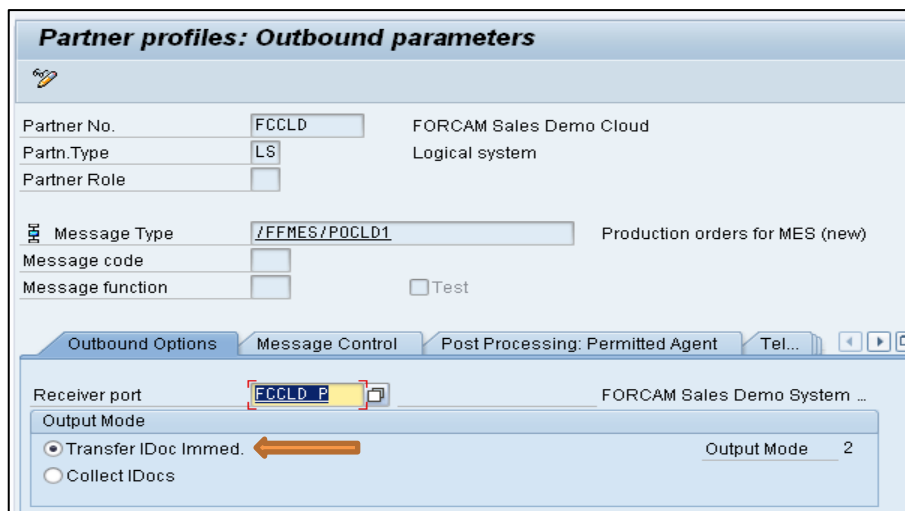

Partner profiles: Outbound parameters

Partner No. FORCAM Sales Demo Cloud
 Parth.Type Logical system
 Partner Role


Message Type Production orders for MES (new)
 Message code
 Message function ☐ Test

Outbound Options | Message Control | Post Processing: Permitted Agent | Tel...

Receiver port FORCAM Sales Demo System ...

Output Mode
☒ Transfer IDoc Immed. ☐ Collect IDocs Output Mode 2

Fig. 7: SAP screen Partner profiles: Outbound parameters

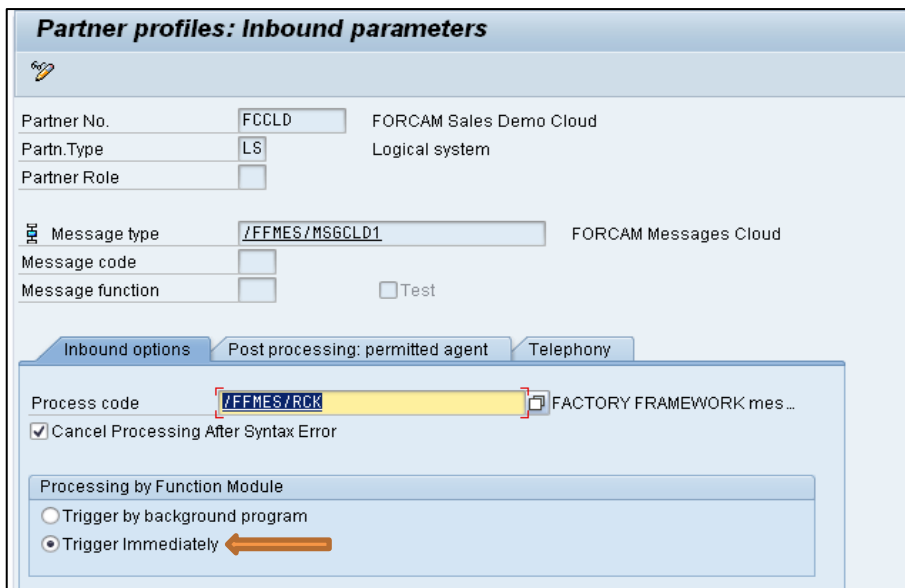

Partner profiles: Inbound parameters

Partner No. FORCAM Sales Demo Cloud
 Parth.Type Logical system
 Partner Role

Message type FORCAM Messages Cloud
 Message code
 Message function ☐ Test

Inbound options | Post processing: permitted agent | Telephony

Process code FACTORY FRAMEWORK mes...
☒ Cancel Processing After Syntax Error

Processing by Function Module
☐ Trigger by background program
☒ Trigger Immediately

Fig. 8: SAP screen Partner profiles: Inbound parameters


4.6 Reprocessing IDocs

IDocs can also be manually processed resp. reprocessed in SAP.

If one IDoc is created on the system, but due to some problem (e.g. RFC not working or system is down) it is not received by another system, you can reprocess the same IDoc after solving the system problem by using the standard SAP transaction code, and there is an additional FORCAM Adapter specific report available. There is no need to create a new IDoc.

4.6.1 Reprocessing IDoc Using BD87


IDocs in error state can be manually processed resp. reprocessed using the transaction code **BD87** in SAP.

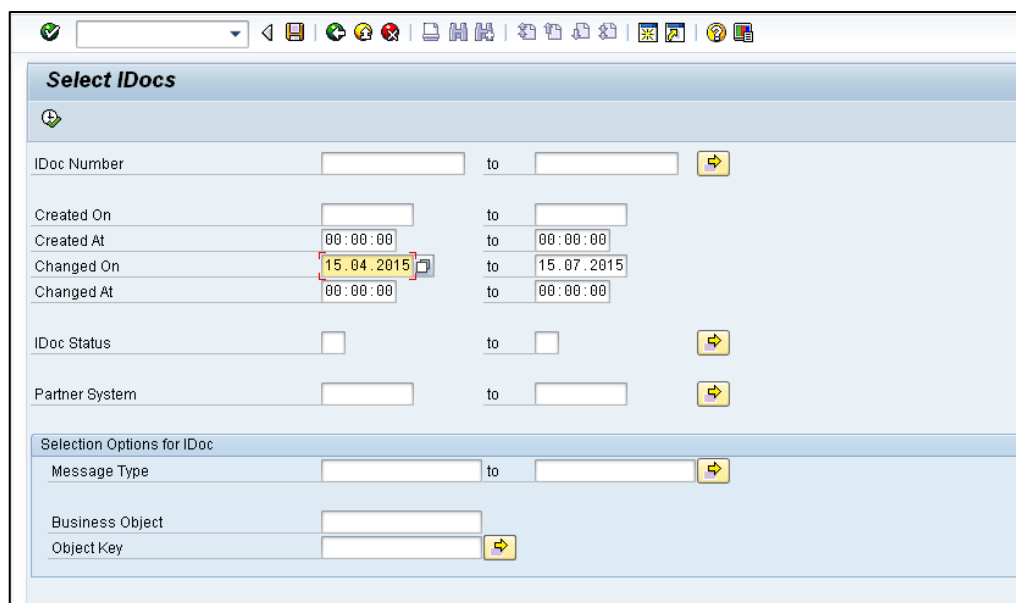

The screenshot shows the 'Select IDocs' screen in SAP. It features a toolbar at the top with various icons. Below the title bar, there are several input fields for selection criteria:

- IDoc Number:** Two text boxes with a 'to' label and a right arrow button.
- Created On:** Two date boxes with a 'to' label and a right arrow button.
- Created At:** Two time boxes with a 'to' label and a right arrow button.
- Changed On:** Two date boxes. The first box contains '15.04.2015' and is highlighted with a red box. The second box contains '15.07.2015'.
- Changed At:** Two time boxes with a 'to' label and a right arrow button.
- IDoc Status:** Two checkboxes with a 'to' label and a right arrow button.
- Partner System:** Two text boxes with a 'to' label and a right arrow button.
- Selection Options for IDoc:**
 - Message Type:** Two text boxes with a 'to' label and a right arrow button.
 - Business Object:** One text box.
 - Object Key:** One text box with a right arrow button.

Fig. 9: Selection screen for IDoc list

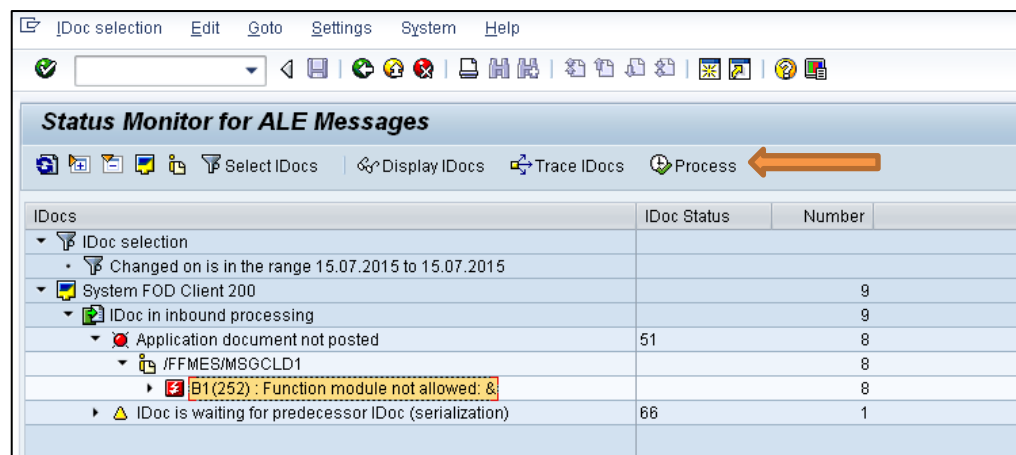

The screenshot shows the 'Status Monitor for ALE Messages' screen in SAP. It features a toolbar at the top with various icons. Below the title bar, there are several tabs: 'Select IDocs', 'Display IDocs', 'Trace IDocs', and 'Process'. The 'Process' tab is selected and highlighted with a red arrow. Below the tabs, there is a table with the following data:

IDocs	IDoc Status	Number
▼ IDoc selection		
• Changed on is in the range 15.07.2015 to 15.07.2015		
▼ System FOD Client 200		9
▼ IDoc in inbound processing		9
• Application document not posted	51	8
▼ /FFMES/MSGCLD1		8
• B1 (252) : Function module not allowed: &		8
• IDoc is waiting for predecessor IDoc (serialization)	66	1

Fig. 10: SAP screen: Status Monitor for ALE Messages

4.6.2 Reprocessing IDocs Using /FFMES/IDoc_MON

The FORCAM report **/FFMES/IDoc_MON** can be used for easy and convenient IDoc monitoring. This report allows handling all inbound error IDocs (status **51**). Using this report, IDocs in error state can be reprocessed. There are options for processing IDocs with serialization issues or any other error in the system.

IDocs are processed, after solving the system issue, by executing any of the options directed below, i.e. **Process IDoc** or **Process IDoc with serialization**.

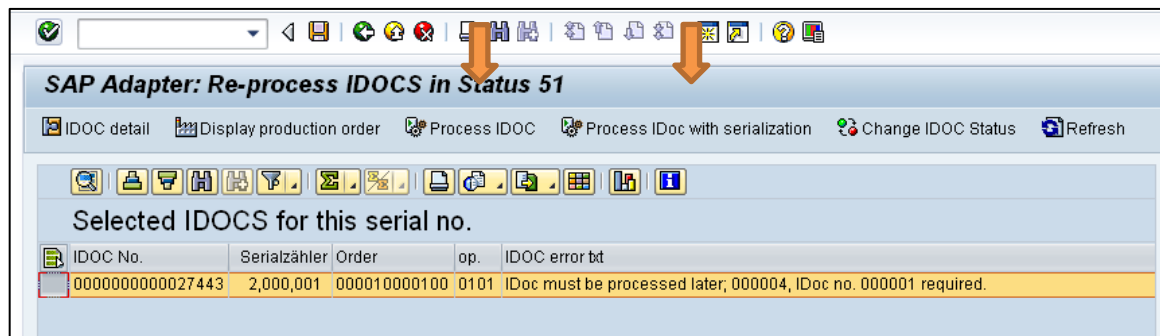


Fig. 11: FORCAM Adapter screen for re-processing IDocs

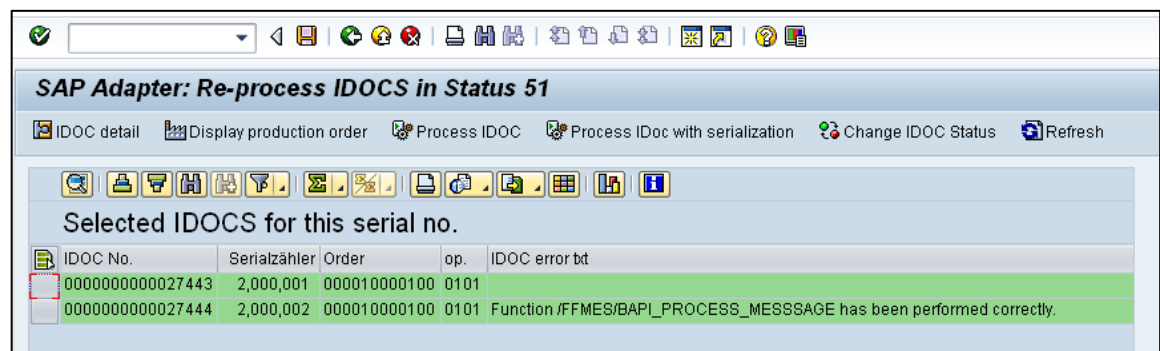


Fig. 12: FORCAM Adapter screen after Re-Processing IDocs

After the serialization issue is resolved, the status changes to **53**:

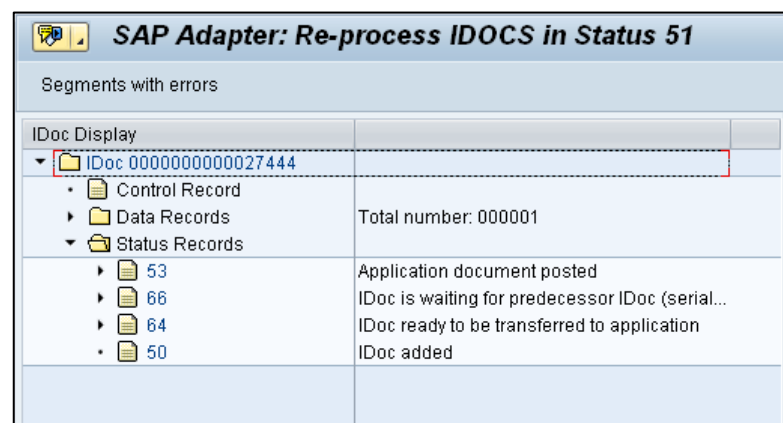


Fig. 13: SAP screen displaying Status Records

4.7 Error Handling for Non-Posted IDoc

SAP Report: RBDMANIN

This program ensures that not yet posted (caught up) IDocs are automatically entered later. This report should run as a regular batch job in a SAP system with active FORCAM Adapter. Details on how to schedule reports can be found in the SAP standard documentation.

Create a report version first, then schedule the job using transaction **SM36**.



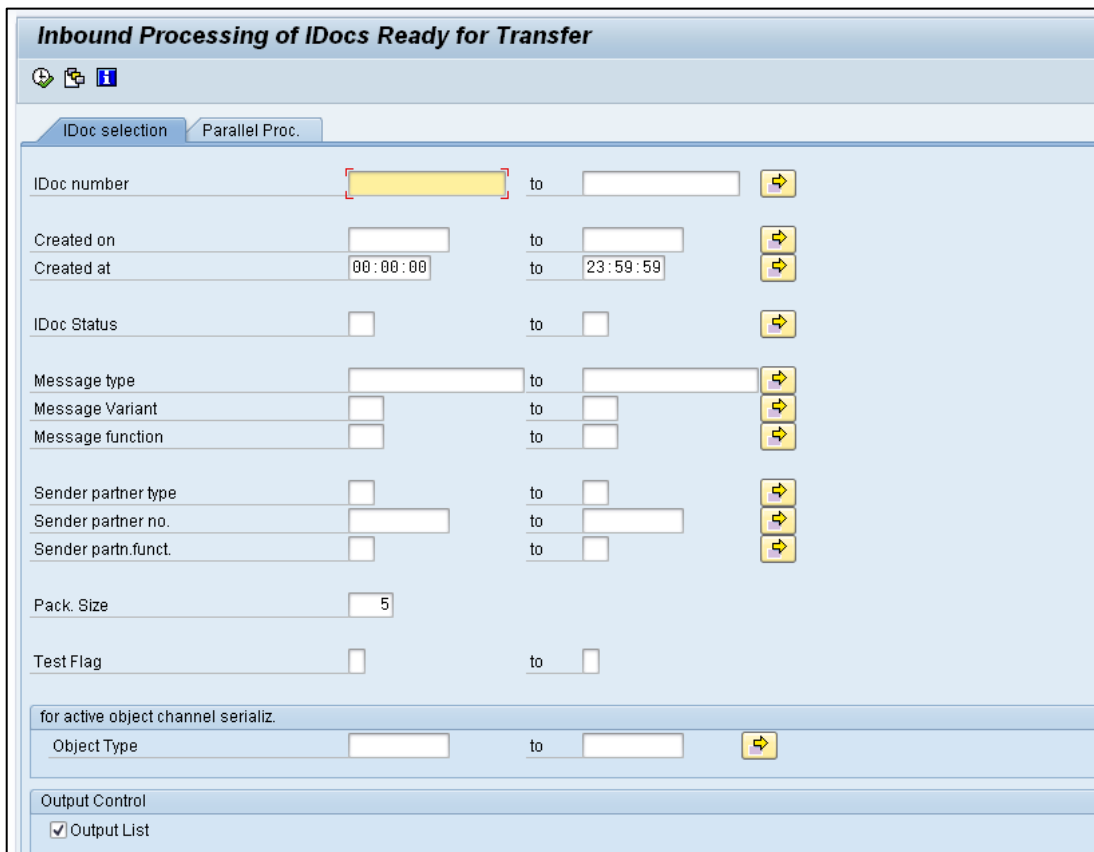


Fig. 14: Selection screen of report RBDMANIN

When serialization is active, the transfer-ready incoming IDocs that are waiting in status **66** after an error occurred, must be initiated again.

This task can be taken-over by report **RBDAPP01** that should be scheduled as regular batch run for this purpose.

 The report RBDMANIN is not able to initiate the IDocs in status 66 for processing.

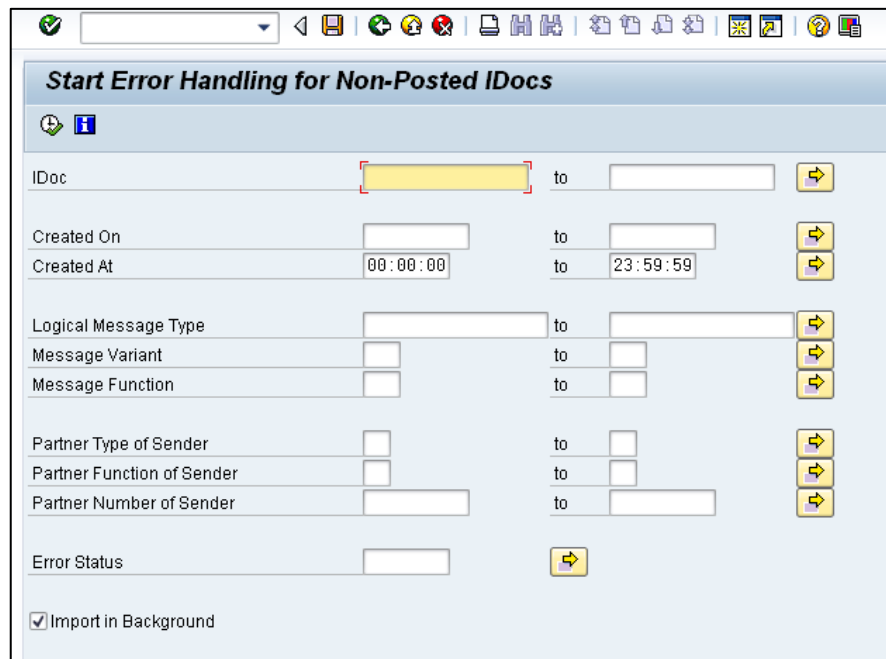

Inbound Processing of IDocs Ready for Transfer

Icons: Refresh, Print, Help

Tab: IDoc selection | Parallel Proc.

IDoc number [] to [] [↔]

Created on [] to [] [↔]

Created at [00:00:00] to [23:59:59] [↔]

IDoc Status [] to [] [↔]

Message type [] to [] [↔]

Message Variant [] to [] [↔]

Message function [] to [] [↔]

Sender partner type [] to [] [↔]

Sender partner no. [] to [] [↔]

Sender partn.funct. [] to [] [↔]

Pack. Size [5]

Test Flag [] to [] [↔]

for active object channel serializ.

Object Type [] to [] [↔]

Output Control

☒ Output List

Fig. 15: Selection screen of report RBDAPP01

4.8 IDoc Deletion

This section describes the deletion of specific IDocs. The report **/FFMES/IDoc_DELETE** is used instead of the existing SAP standard tools (transaction **WE11**).

Two options are available to delete IDocs:

- Delete completely = remove from all databases
- Delete logically = set a new status that excludes the IDoc from further processing (status **68**)

To execute the deletion, you can use the SAP standard function module **EDI_DOCUMENT_DELETE**. It is possible to run a simulation to check the selection.

When deleting logically, a new status is set (**68** = no further processing). This change is only possible with IDocs in the IDoc inbox.

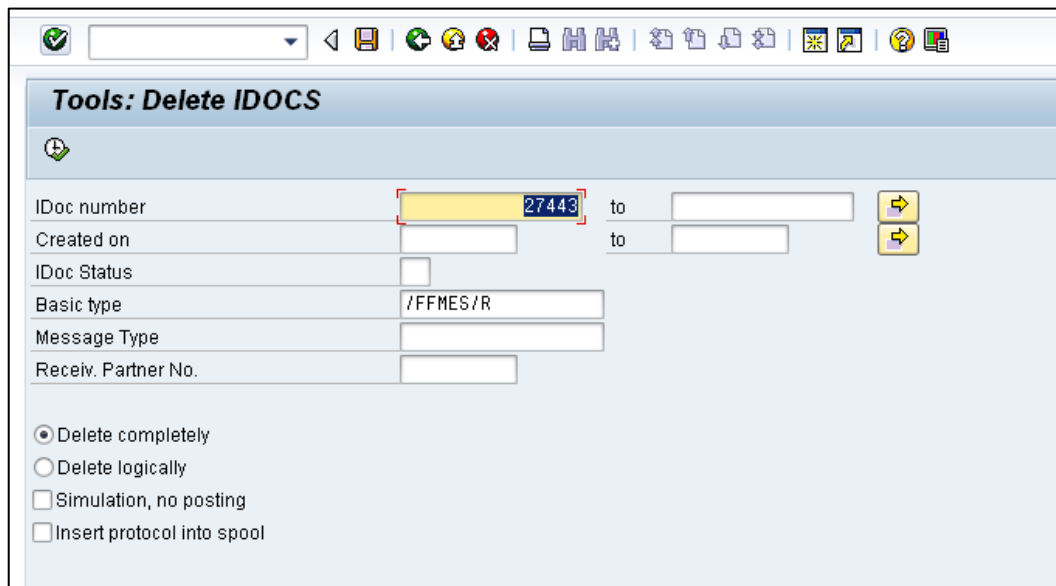


Fig. 16: Selection screen of Report /FFMES/IDoc_DELETE

4.9 Re-Send IDocs to FORCAM FORCE™

Connection between SAP and FORCAM FORCE™ can be lost in some special situations. It can happen that the service on the FORCAM server is not running correctly or other technical problems may happen. This results in un-sent IDocs in the SAP IDoc outbox.

You can use the report **/FFMES/RBDAGAIN_HTTP** to re-send outbound IDocs to the FORCAM system (production order data). This report considers all changes since the last transfer and sends the correct IDoc.

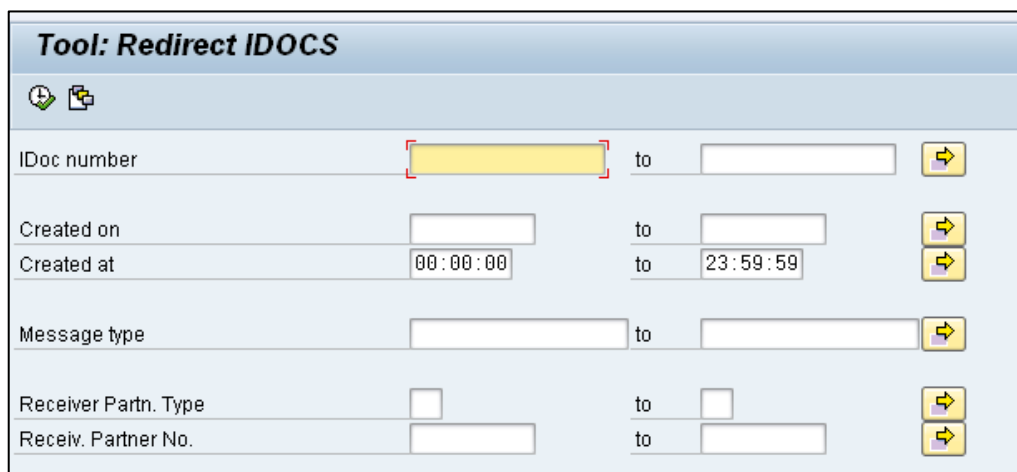


Fig. 17: Selection screen of report /FFMES/RBDAGAIN_HTTP

4.10 Mass Transfer of Orders to FORCAM FORCE™

Production order data are transferred via outbound IDocs automatically on order release or after order changes. BADI implementation (SAP standard BADI “work order update”) allows this functionality.

Sometimes it will be necessary to transfer selected orders apart from this logic, e.g. after the implementation of a new machine into the FORCAM interface or the start of a new FORCAM installation. The report **/FFMES/TRANSFER_ORDER_SPEC** was created for this task.

This report creates IDocs with basic type **/FFMES/F**. The function module from BADI implementation is used for the IDoc creation.

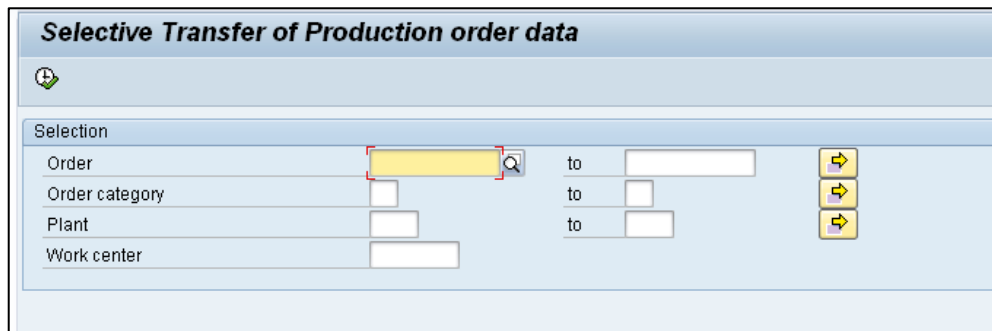


Fig. 18: Selection screen of report **/FFMES/TRANSFER_ORDER_SPEC**

5 Fine-Tuning the FORCAM FORCE™ Adapter for SAP

The FORCAM Adapter can be easily adjusted to meet several additional requirements after initial setup. These features are not mandatory but might be helpful in certain installations.

5.1 Table /FFMES/CONTROL_V

5.1.1 Functionality

Table **/FFMES/CONTROL_V** contains most important global control parameters for the FORCAM Adapter. It is the parameter value table for table **/FFMES/CONTROL**. Here you can switch on the necessary parameters.

The following example shows how an activated parameter is displayed in table **/FFMES/CONTROL**:

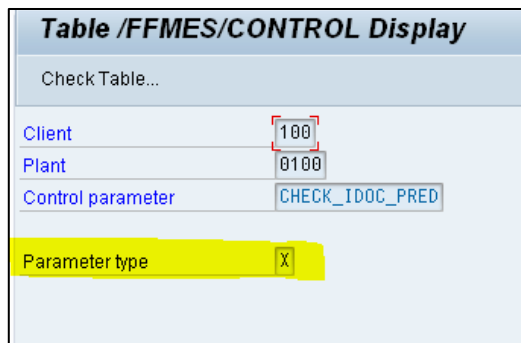


Table /FFMES/CONTROL Display	
Check Table...	
Client	100
Plant	0100
Control parameter	CHECK_IDOC_PRED
Parameter type	X

Fig. 19: Activated parameter in table /FFMES/CONTROL

/FFMES/CONTROL_V is a customizing table. Content of this table is transported and must be maintained only in a development/customizing system. Changes must be imported via transport request.

Parameters to be activated must have an entry in table **/FFMES/CONTROL_V**.

/FFMES/CONTROL is an application table. Content of this table is not transported and must be maintained separately in each system.

All parameters can be switched on according to desired functionality. No parameter is mandatory except **CHECK_IDoc_PRED**.

5.1.2 Existing Parameters and Their Use

5.1.2.1 CHECK_IDoc_PRED - Check Activity Status of IDoc Predecessor

This parameter is most commonly used. It must be activated to allow serialization of incoming IDocs on operation level.

This serialization is used in all standard installations as a default. For more details see the Adapter Customizing manual.

5.1.2.2 ACTIV_CLEAR_RES - Clear Open Reservations if Final Confirmation

This parameter is used in booking of confirmations. If the parameter is activated, all open reservations will be cleared while booking final confirmation (function module **BAPI_PRODORDCONF_CREATE_TT**).

5.1.2.3 ACTIV_NO_REMN_n - Indicator: No Remaining Activity Expected for Standard Value

This parameter is used in booking of confirmations with record type **L40** (final confirmation). If the parameter is activated, the indicator "No remaining activity expected" will be set active (function module **BAPI_PRODORDCONF_CREATE_TT**).

Every standard value has a single parameter which must be activated separately:

- **ACTIV_NO_REMN_1**
Indicator: No remaining activity expected for standard value 1
- **ACTIV_NO_REMN_2**
Indicator: No remaining activity expected for standard value 2
- **ACTIV_NO_REMN_3**
Indicator: No remaining activity expected for standard value 3
- **ACTIV_NO_REMN_4**
Indicator: No remaining activity expected for standard value 4
- **ACTIV_NO_REMN_5**
Indicator: No remaining activity expected for standard value 5
- **ACTIV_NO_REMN_6**
Indicator: No remaining activity expected for standard value 6

5.1.2.4 ACTIV_SEQUENCES - Activate Sequences

This parameter is used in download of production order data in the function module for IDoc creation. It controls the download of sequence data to MES.

If the parameter is set to inactive, only operation data for the sequence **000000** are sent to the FORCAM system.

5.1.2.5 ALLOW_BLK_PERD - Allow Booking in Blocked Period

This parameter is used in confirmation booking after checking of booking period.

If the parameter is set active, posting date will be set to actual date (SY-DATUM) and booking will be made. Otherwise the posting date will remain the shift date from the incoming IDoc and booking will be tried. In this case an error will occur (red IDoc).

5.1.2.6 CHECKLOCK_INACT - CHECK_LOCK Not Active

This parameter is used in IDoc inbound processing.

If the parameter is set active, no locking attempts (5 times) will be made. The IDoc goes directly into error if the order is locked by another process.

5.1.2.7 CHECK_AFOLG_S_D - Check Operations for Deletion and Insertion Entries

This parameter is used in the IDoc outbound process.

In the function module for production order of an IDoc creation, this parameter is used to generate correct IDocs after re-reading master data.

If this parameter is active, deletion (D) records for one order operation are not sent if a creation (S) record is sent in that IDoc for the same order operation.

5.1.2.8 CHECK_COMPL_DWN - Check Complete Component Download

This parameter is used in the IDoc outbound process.

As standard, component information (**AFOKO** segment) is only sent completely at order release or after changes of components. The parameter **CHECK_COMPL_DWN** must be set active if complete component information (all components of order) are to be sent with every download of production order data.

5.1.2.9 CHECK_DUMMY_ORD - Check for Dummy Orders

This parameter is used in the IDoc inbound process.

Wrong order numbers can cause unnecessary error IDocs. If the parameter is set active, the order number is checked against SAP tables and the IDoc will be set to status **68** if the order does not exist in SAP.

5.1.2.10 CHK_ACT_SYSID_x - Indicator: Active Check for SYSID

This group of parameters is used in the IDoc outbound process.

SAP system ID (**SYSID**) is an additional key field which can be transferred to the FORCAM system.

If the parameter is set active, **SYSID** is filled in IDoc segments and transferred to the FORCAM system.

There are separate parameters for production order data, HR data and shift data:

- **CHK_ACT_SYSID_F**
Indicator: Active check for SYSID - PROD. ORDER
- **CHK_ACT_SYSID_H**
Indicator: Active check for SYSID - HR DATA
- **CHK_ACT_SYSID_S**
Indicator: Active check for SYSID - SHIFT DATA

5.1.2.11 DONOTUSEF_xxx - Do Not Use xxx in Confirmations

This group of parameters is used in confirmation booking (inbound IDocs from FORCAM).

If the parameter is set active, certain fields are not filled in confirmations.

There are separate parameters for work center, personnel number and time recording card:

- **DONOTUSEF_ARBPL**: Do not use work center in confirmations
- **DONOTUSEF_PERNR**: Do not use personnel number in confirmations
- **DONOTUSEF_ZAUSW**: Do not use time recording ID card number in confirmations

5.1.2.12 INACTIV_FINCONF - Indicator: FIN_CONF Not Active if Final Confirmation

This parameter is used in confirmation booking with record type **L40** (final confirmation).
If the parameter is set active, the indicator for final confirmation will not be set.

5.1.2.13 OPEND_TAR_ACTIn - Indicator: Determine Target Activity if OPEND - Standard Value n

This group of parameters is used in confirmation booking with record type **L40**. It is used for bookings of target activities (planned = actual).

There are parameters for each standard value which can be activated independently:

- OPEND_TAR_ACTI1
Indicator: Determine target activity if OPEND - standard value 1
- OPEND_TAR_ACTI2
Indicator: Determine target activity if OPEND - standard value 2
- OPEND_TAR_ACTI3
Indicator: Determine target activity if OPEND - standard value 3
- OPEND_TAR_ACTI4
Indicator: Determine target activity if OPEND - standard value 4
- OPEND_TAR_ACTI5
Indicator: Determine target activity if OPEND - standard value 5
- OPEND_TAR_ACTI6
Indicator: Determine target activity if OPEND - standard value 6

Target activity is determined in these cases at operation end.

5.1.2.14 POST_ALL_CONFIR - Post All MES Confirmations

This parameter is used in activity confirmation processing (inbound IDocs).

If the parameter is set active, all confirmations with record type **L20** must to be booked.

If the parameter is not set, only the first activity booking with **L20** will be booked.

This logic applies to **OPSTR** and **OPINT** bookings.

5.1.2.15 QTYMG_TAR_ACTIn - Indicator: Determine Target Activity if QTYMG - Standard Value n

This group of parameters is used in confirmation booking of quantities. It is used for bookings of target activities (planned = actual).

There are parameters for each standard value which can be activated independently:

- QTYMG_TAR_ACTI1
Indicator: Determine target activity if QTYMG - standard value 1
- QTYMG_TAR_ACTI2
Indicator: Determine target activity if QTYMG - standard value 2
- QTYMG_TAR_ACTI3
Indicator: Determine target activity if QTYMG - standard value 3
- QTYMG_TAR_ACTI4
Indicator: Determine target activity if QTYMG - standard value 4
- QTYMG_TAR_ACTI5
Indicator: Determine target activity if QTYMG - standard value 5
- QTYMG_TAR_ACTI6
Indicator: Determine target activity if QTYMG - standard value 6

Target activity is determined in these cases at quantity bookings.

5.2 Table /FFMES/CONF_QTY (optional)

5.2.1 Main purpose

Maintain this table when there is a need to adjust the target quantity in IDoc download of production order data according to expected confirmation quantity and confirmations on predecessor operation.

5.2.2 Functionality

/FFMES/CONF_QTY is an application table. Content of this table is not transported and must be maintained separately in each system.

Target quantity of production order operation is transferred to the FORCAM system in the field **MGVRG (AFOLG segment)**.

Expected confirmation quantity is influenced by previously booked confirmations on predecessor operations. There is SAP standard customizing which must be adjusted accordingly.


If status **CNF** is set into actual operation then all relevant operations will be sent in download IDoc. In this case, booked quantity of good parts in the predecessor operation will be set as target quantity of successor operations.

This table is relevant for IDoc download to the FORCAM system (IDocs in outbox).

Conditions from table **/FFMES/CONF_QTY** are checked within the SAP adapter package.

5.2.3 Table Maintenance

Table **/FFMES/CONF_QTY** must be maintained to activate the logic of target quantity adjustment as described. This table is plant specific and has the following structure:

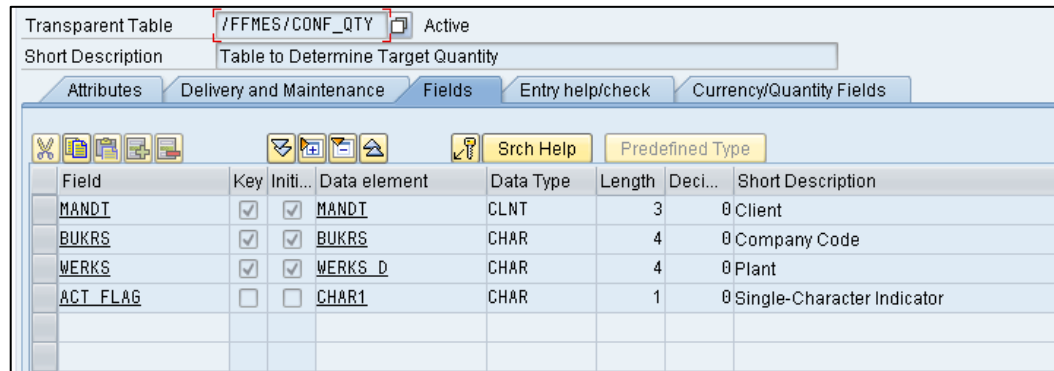

Transparent Table **/FFMES/CONF_QTY** Active

Short Description: Table to Determine Target Quantity

Attributes | Delivery and Maintenance | **Fields** | Entry help/check | Currency/Quantity Fields

Field	Key	Initi...	Data element	Data Type	Length	Deci...	Short Description
MANDT	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	MANDT	CLNT	3		0 Client
BUKRS	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	BUKRS	CHAR	4		0 Company Code
WERKS	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	WERKS_D	CHAR	4		0 Plant
ACT_FLAG	<input type="checkbox"/>	<input type="checkbox"/>	CHAR1	CHAR	1		0 Single-Character Indicator

Fig. 20: Structure of table /FFMES/CONF_QTY

An example entry might look like this:

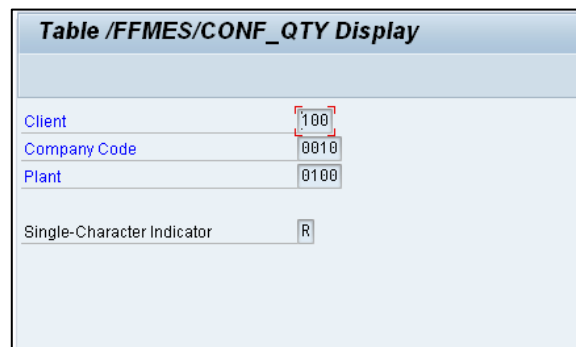


Table /FFMES/CONF_QTY Display

Client	100
Company Code	0010
Plant	0100
Single-Character Indicator	R

Fig. 21: Example entry of table /FFMES/CONF_QTY

The Single-Character Indicator can have the values R or Q.

- R:
Operation quantity from SAP table **AFVV**. Confirmed good quantity minus scrap is used if status **CNF** is active in a predecessor operation
- Q:
Field **SMENG** is used, which is determined by calling SAP function module **CO_RU_DET_CONF_QUANTITY**.

5.3 Table /FFMES/CONST (optional)

5.3.1 Main purpose

Maintain this table when configurable constants shall be used to adjust adapter functionality.

5.3.2 Functionality

/FFMES/CONST is an application table. Content of this table is not transported and must be maintained separately in each system.

There are existing constants which can be activated and used by maintaining table **/FFMES/CONST**. In addition to that, new customer specific constants can be implemented. Coding for additional constants must be implemented in existing enhancement methods.


Existing constants are:

- S:
Switch off IDoc inbox serialization for specified FORCAM record type.
- W:
Waiting time in seconds per plant or single work center. This waiting time is used in IDoc processing (check lock entries, check predecessor for IDoc serialization).

This table is relevant for IDoc upload from the FORCAM system to SAP (IDocs in inbox). Conditions from table **/FFMES/CONST** are checked within the SAP adapter package.

5.3.3 Table Maintenance

Table **/FFMES/CONST** must be maintained to activate the configurable constants. Entries can be created plant or work center specific. Sequence number allows combined entries. Field **C_USE** must contain the abbreviation for the respective constant (e.g. “W” for configurable waiting time).

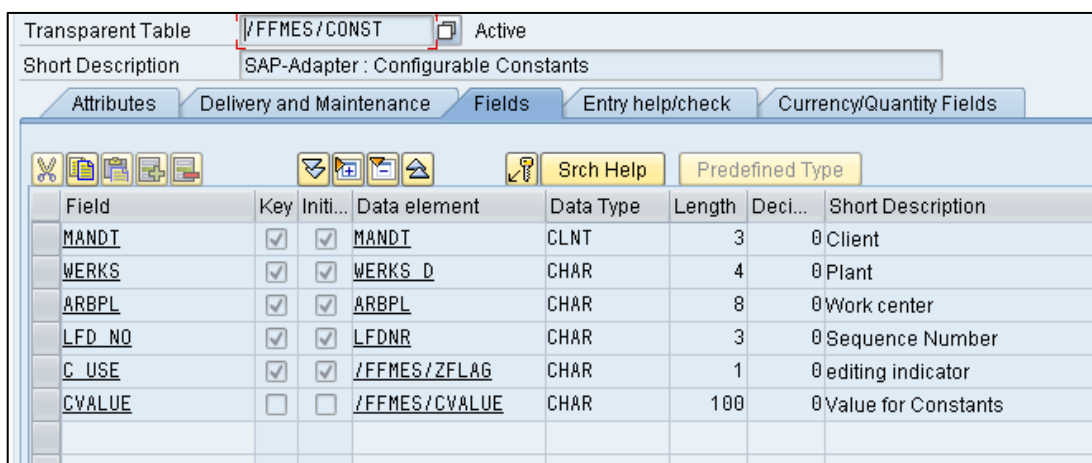

Field	Key	Initi...	Data element	Data Type	Length	Deci...	Short Description
MANDT	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	MANDT	CLNT	3		0 Client
WERKS	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	WERKS_D	CHAR	4		0 Plant
ARBPL	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	ARBPL	CHAR	8		0 Work center
LFD_NO	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	LFDNR	CHAR	3		0 Sequence Number
C_USE	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	/FFMES/ZFLAG	CHAR	1		0 editing indicator
CVALUE	<input type="checkbox"/>	<input type="checkbox"/>	/FFMES/CVALUE	CHAR	100		0 Value for Constants

Fig. 22: Structure of table /FFMES/CONST

An example entry with constant **S** might look like this:

Table /FFMES/CONST Display	
Client	1100
Plant	0100
Work center	
Sequence Number	1
EID	S
Val for Constants	INTST

Fig. 23: Example entry with constant S

Additional entries must be maintained for each record type which should not have serialization on PO operation level. The following example shows switching off serialization for record types **INTST** and **INTND**.

SAP-Adapter : Configurable Constants					
	PInt	Work ctr	No.	EID	Val for Constants
	0100		1	S	INTST
	0100		2	S	INTND

Fig. 24: Switching off serialization for record types INTST and INTND

An example entry with constant **W** might look like this:

Table /FFMES/CONST Display	
Client	1100
Plant	0100
Work center	00502700
Sequence Number	1
EID	W
Val for Constants	3

Fig. 25: Example entry with constant W

The following table describes the table fields of /FFMES/DELETE_PO:

Table 1: Fields of table /FFMES/DELETE_PO

Field	Description
BUKRS	Actual company code where user is logged on
WERKS	Plant number (conditions must be set for each plant)
AUART	Order type for which the condition is valid
STSMA	Status profile in which “deletion relevant” status is included (blank = for all)
ESTAT	System status for deletion record (in internal notation, e.g. I0009)
PO_LEVEL	Level where check is applied (H = header, O = operation)

5.4.3 Table Maintenance

Users must be aware that standard deletion records are not created if table /FFMES/DELETE_PO is not empty. I.e. all status entries producing deletion records must be maintained in the table. The status must be entered in internal format. Values for that are found in table **TJ02T** (system status).

An example entry might look like this:

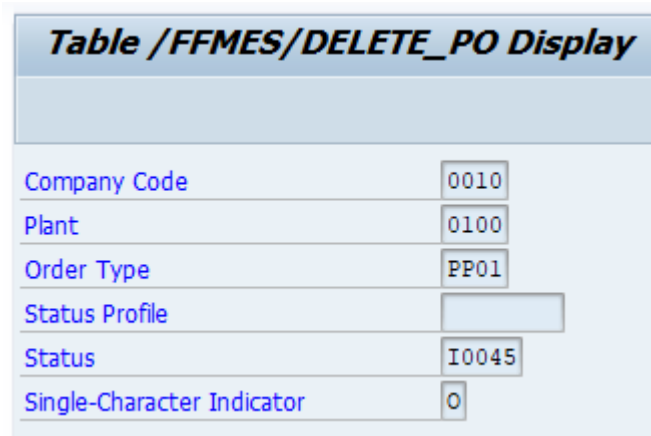


Table /FFMES/DELETE_PO Display	
Company Code	0010
Plant	0100
Order Type	PP01
Status Profile	
Status	I0045
Single-Character Indicator	O

Fig. 27: Example entry of table /FFMES/DELETE_PO

5.5 Table /FFMES/FILTER (optional)

5.5.1 Main purpose

Maintain this table when there is a need to filter out certain production orders or production order operations from being sent via the FORCAM interface.


5.5.2 Functionality

/FFMES/FILTER is a customizing table. Content of this table is transported and must be maintained only in development/customizing system. Changes must be imported via transport request.

This table is used for definition of certain filter conditions which allow to exclude production orders or production order operations from transfer to the FORCAM system.

This table is relevant for IDoc download to the FORCAM system (IDocs in outbox).

Conditions from table **/FFMES/FILTER** are checked within the SAP adapter package (more details can be found in method **DYNAMIC_FILTER**).

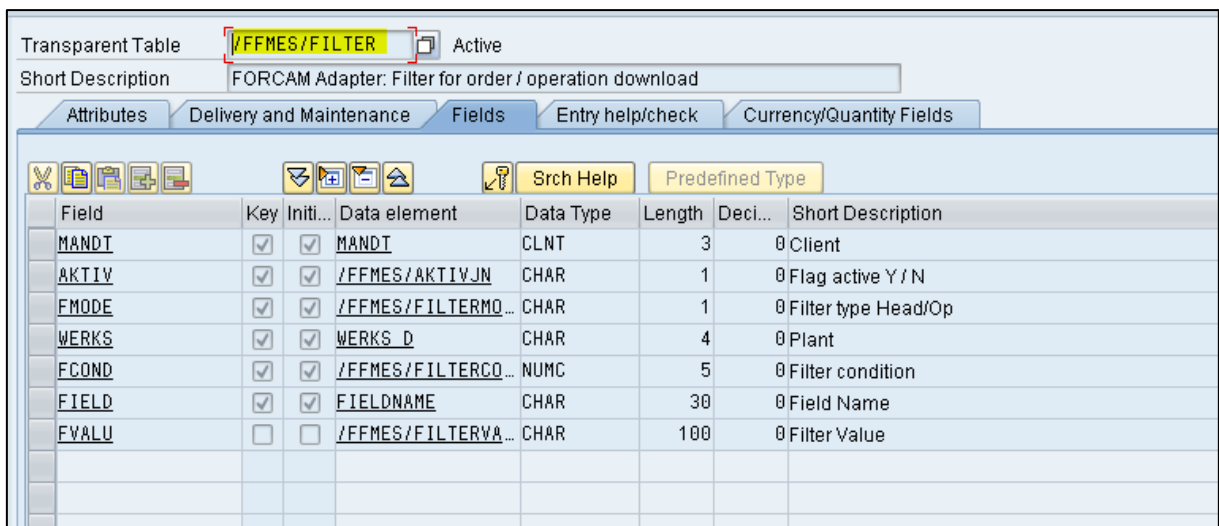

Field	Key	Initi...	Data element	Data Type	Length	Deci...	Short Description
MANDT	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	MANDT	CLNT	3		0 Client
AKTIV	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	/FFMES/AKTIVJN	CHAR	1		0 Flag active Y / N
FMODE	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	/FFMES/FILTERMO...	CHAR	1		0 Filter type Head/Op
WERKS	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	WERKS_D	CHAR	4		0 Plant
FCOND	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	/FFMES/FILTERCO...	NUMC	5		0 Filter condition
FIELD	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	FIELDNAME	CHAR	30		0 Field Name
EVALU	<input type="checkbox"/>	<input type="checkbox"/>	/FFMES/FILTERVA...	CHAR	100		0 Filter Value

Fig. 28: Structure of table /FFMES/FILTER

The following table describes the table fields of **/FFMES/FILTER**:


Table 2: Fields of table **/FFMES/FILTER**

Field	Description
MANDT	Actual client where user is logged on
AKTIV	Activity flag of a condition. If this flag has not been set for a specific condition, this condition will not be used for filter logic.
FMODE	Filter mode Header/Operation describes the level of filter usage.
WERKS	Plant number (conditions have to be set for each plant)
FCOND	Condition number is crucial for identification of condition combination. Entries with the same condition number are connected by a logical AND. Entries which have a different condition number are interpreted as OR blocks.
FIELD/FVALU	Combination of field and if characteristic which should cause a filtering

5.5.3 Table Maintenance

The following picture shows a possible filter condition. Operations which fit those conditions are not transferred to the FORCAM system:

Display View "FORCAM Adapter: Filter for order / operation download":

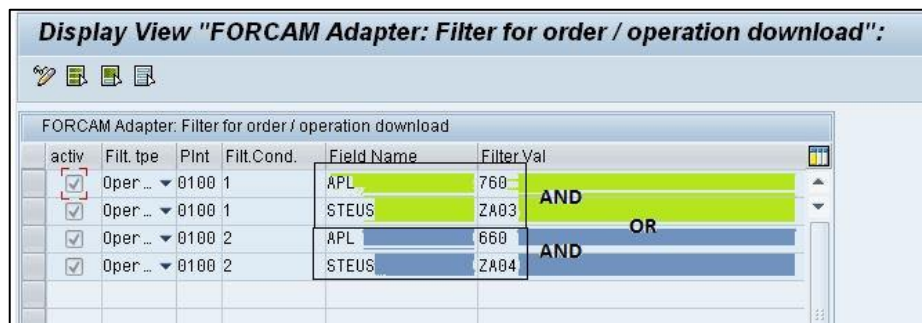

activ	Filt. tpe	Plnt	Filt. Cond.	Field Name	FilterVal
<input checked="" type="checkbox"/>	Oper...	0100	1	APL	760
<input checked="" type="checkbox"/>	Oper...	0100	1	STEUS	ZA03
<input checked="" type="checkbox"/>	Oper...	0100	2	APL	660
<input checked="" type="checkbox"/>	Oper...	0100	2	STEUS	ZA04

Fig. 29: Filter condition for production order download (example)

In table **/FFMES/FILTER** all conditions are checked which are active and belong to the plant of production order operation.

An operation will be filtered out and not sent to the FORCAM system if one of the defined AND conditions in **/FFMES/FILTER** table applies.

5.6 Table /FFMES/SKIP_MSG (optional)

5.6.1 Main purpose

Maintain this table when incoming messages from certain FORCAM relevant work centers must be skipped.

5.6.2 Functionality


/FFMES/SKIP_MSG is an application table. Content of this table is not transported and must be maintained separately in each system.

Incoming messages for certain work centers can be skipped in SAP (not being processed) if it is not possible to suppress sending from MES.

Table **/FFMES/SKIP_MSG** must be maintained for all work centers whose messages should not be processed in SAP.

This table is relevant for IDoc Upload from the FORCAM system into SAP (IDocs in inbox).

Logic is implemented in inbound function module **/FFMES/IDoc_INPUT_MESSAGE**.

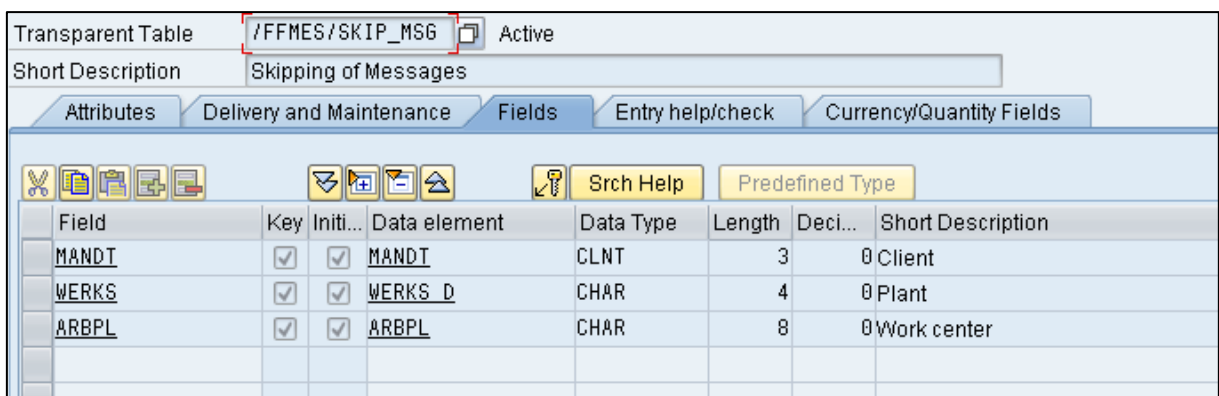

Field	Key	Initi...	Data element	Data Type	Length	Deci...	Short Description
MANDT	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	MANDT	CLNT	3	0	Client
WERKS	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	WERKS_D	CHAR	4	0	Plant
ARBPL	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	ARBPL	CHAR	8	0	Work center

Fig. 30: Structure of table /FFMES/SKIP_MSG

5.6.3 Table Maintenance

Table entries must be created for all relevant work centers which should not receive any bookings from FORCAM system.

An example entry might look like this:

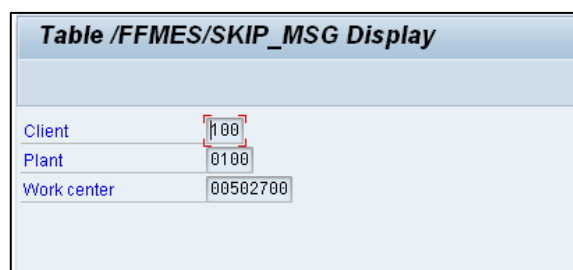


Table /FFMES/SKIP_MSG Display	
Client	100
Plant	0100
Work center	00502700

Fig. 31: Example entry of table /FFMES/SKIP_MSG

All incoming messages (basic type **/FFMES/R**) for this work center and plant will not be booked by the interface. No error IDocs will be produced.

5.7 Table /FFMES/STATUS (optional)

5.7.1 Main purpose

Maintain this table when there is a need to set customer status accordingly into production order operation after receiving certain messages from the FORCAM system.

5.7.2 Functionality

/FFMES/STATUS is a customizing table. Content of this table is transported and must be maintained only in development/customizing system. Changes must be imported via transport request.

This table is used for mapping of FORCAM order status into SAP user status values. Certain user status values can be set during processing of status messages (MES record types **OPSTR**, **OPINT** or **OPEND**).

 User status logic must be activated in table **/FFMES/GLOBAL**.

Flag "Status logic act." must be switched on.

Fig. 32: Flag Status logic act.

Table **/FFMES/STATUS** is checked while receiving IDocs from the connected FORCAM system (IDocs in inbox).

Transparent Table **/FFMES/STATUS** Active

Short Description **FORCAM Adapter: Map Status**

Attributes Delivery and Maintenance Fields Entry help/check Currency/Quantity Fields

Field Key Initi... Data element Data Type Length Deci... Short Description

MANDT	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	MANDT	CLNT	3	0	Client
BUKRS	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	BUKRS	CHAR	4	0	Company Code
WERKS	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	WERKS_D	CHAR	4	0	Plant
AUART	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	AUFART	CHAR	4	0	Order Type
AUSTA	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	/FFMES/AUSTA	CHAR	2	0	FACT order status
STSMA	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	J_STSMA	CHAR	8	0	Status Profile
ESTAT	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	J_STATUS	CHAR	5	0	Object status
INACT	<input type="checkbox"/>	<input type="checkbox"/>	J_INACT	CHAR	1	0	Indicator: Status Is Inactive

Fig. 33: Structure of table /FFMES/STATUS

The field "INACT" means that previously set user status values must be deactivated before setting the new status value.

5.7.3 Table Maintenance

An example entry might look like this:

Display View "FORCAM Adapter: Map Status": Overview

FORCAM Adapter: Map Status

Co...	Plnt	Type	FACTstatus	StatProf	Stat.	I
0010	0100	PP01	50	FCPROD	E0004	<input type="checkbox"/>

Fig. 34: Example entry of table /FFMES/STATUS

- CoCode:
Company code of production order
- Plnt:
Plant of production order
- TYPE:
Order type of the production order from received MES message
- FACT Status:
MES order status from received MES message
- StatProf:
Status profile to be used for setting of user status
- Stat:
User status to be set (internal name from table **TJ30T**)
- I:
Deactivate existing status before setting new user status value

5.8 Table /FFMES/STDVAL (optional)

5.8.1 Main purpose

Maintain this table when there is a need to map SAP standard values to the MES (FORCAM) standard values due to a different assignment of standard values in SAP (to be used in time confirmations on production order operations sent by FORCAM interface via inbox IDocs).

5.8.2 Functionality

/FFMES/STDVAL is an application table. Content of this table is not transported and must be maintained separately in each system.

This table is used for mapping the MES time base to the SAP standard values while posting the confirmations sent via messages from FORCAM. Standard values in FORCAM are 1= Setup, 2= Production, 3= Labor time.

These values can be differently assigned in SAP, e.g. 1 = Production/processing time.

The table is used if there are no specific entries in the **/FFMES/VERTEILER** table for mapping the MES time base to a specific standard value. Assignment of specific standard values can be maintained in the table for plant, work center category, standard value key, work center and MES time base.

MES time base describes the FORCAM system activity types (e.g. manufacturing time).

An entry in this table may look like this:

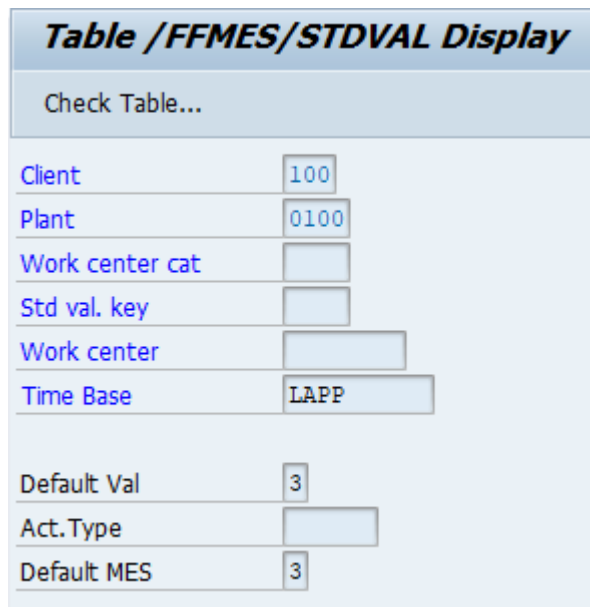


Table /FFMES/STDVAL Display	
Check Table...	
Client	100
Plant	0100
Work center cat	
Std val. key	
Work center	
Time Base	LAPP
Default Val	3
Act. Type	
Default MES	3

Fig. 35: Example entry in table /FFMES/STDVAL

The next picture shows another example of table entries in which different standard values are defined for specific work centers. It illustrates the assignment of different activity types for time posting:

/FFMES/STDVAL: Display of Entries Found

Table to be searched: /FFMES/STDVAL SAP-Adapter: Dynamic standard value

Number of hits: 18

Runtime: 0 Maximum no. of hits: 500

Plant	Cat.	SVK	Work ctr	Time Base	Default	ACTTP	Def.MES
0150				LAPP	3	100	3
0150				LAPR	2	130	2
0150				LARU	1	120	1
0150		42250		LARU	1	120	1
0150		42310		LAPP	3	110	3
0150		42310		LAPR	2	130	2
0150		42310		LARU	1	120	1
0150		42330		LAPP	3	110	3
0150		42330		LAPR	2	130	2
0150		42330		LARU	1	120	1
0150		42340		LAPP	3	110	3
0150		42340		LAPR	2	130	2
0150		42340		LARU	1	120	1
0150		42350		LAPP	3	110	3
0150		42350		LAPR	2	130	2
0150		42360		LAPP	3	110	3
0150		42360		LAPR	2	130	2
0150		42360		LARU	1	120	1

Fig. 36: Sample entries for /FFMES/STDVAL with assignment of different activity types for time confirmations on PO operations

5.8.3 Table Maintenance

Activity type for booking of confirmation is read with time base sent by MES message from table **/FFMES/VERTEILER**. If no entry has been found there, then table **/FFMES/STDVAL** will be used. Table **/FFMES/STDVAL** can be used for mapping in upload scenarios (PO confirmation) or download scenarios (Transfer PO data).

For all reading attempts in upload scenarios, additionally the MES time base will be used.

- At first, the table will be read with key fields **Plant** and **work center** from MES message (Inbox IDoc).
- Next attempt will be made with:
 - **Plant, work center type, control key**
No work center should be specified in that table entry (left blank).
- Next attempt will be made with:
 - **Plant and work center type**
No control key and no work center should be specified in that table entry (both fields left blank).
- Next attempt will be made with:
 - **Plant and control key**
No work center type and no work center should be specified in that table entry (both fields left blank).
- Next attempt will be made with:
 - **Plant**
No work center type, no control key and no work center should be specified in that table entry (all 3 fields left blank).

- ⚠ Important for upload (confirmation bookings):
If no specified entry has been found after all those attempts, then the standard value for this booking will be filled with zero.
- ⚠ Any unwanted zero booking of durations or activities might be an indicator for wrong maintenance of table **/FFMES/STDVAL**.
- ⚠ If an entry has been found, the results will be mapped accordingly into target fields for download (**AFOLG-VGWxx**) or Upload (**AFVV-VGWxx**). A mapping is also possible for specially wanted activity types.

6 Annex: Table of Figures

Fig. 1: SAP screen displaying the IDoc structure	8
Fig. 2: Display Control Record screen	9
Fig. 3: SAP screen displaying Data Record	9
Fig. 4: SAP screen displaying Status Record	10
Fig. 5: SAP Screen IDoc List	11
Fig. 6: Selection Screen of Report RC1_IDoc_SET_STATUS	12
Fig. 7: SAP screen Partner profiles: Outbound parameters	13
Fig. 8: SAP screen Partner profiles: Inbound parameters	13
Fig. 9: Selection screen for IDoc list	14
Fig. 10: SAP screen: Status Monitor for ALE Messages	14
Fig. 11: FORCAM Adapter screen for re-processing IDocs	15
Fig. 12: FORCAM Adapter screen after Re-Processing IDocs	15
Fig. 13: SAP screen displaying Status Records	15
Fig. 14: Selection screen of report RBDMANIN	16
Fig. 15: Selection screen of report RBDAPP01	17
Fig. 16: Selection screen of Report /FFMES/IDoc_DELETE	18
Fig. 17: Selection screen of report /FFMES/RBDAGAIN_HTTP	18
Fig. 18: Selection screen of report /FFMES/TRANSFER_ORDER_SPEC	19
Fig. 19: Activated parameter in table /FFMES/CONTROL	20
Fig. 20: Structure of table /FFMES/CONF_QTY	25
Fig. 21: Example entry of table /FFMES/CONF_QTY	25
Fig. 22: Structure of table /FFMES/CONST	26
Fig. 23: Example entry with constant S	27
Fig. 24: Switching off serialization for record types INTST and INTND	27
Fig. 25: Example entry with constant W	27
Fig. 26: Structure of table /FFMES/DELETE_PO	28
Fig. 27: Example entry of table /FFMES/DELETE_PO	29
Fig. 28: Structure of table /FFMES/FILTER	30
Fig. 29: Filter condition for production order download (example)	31
Fig. 30: Structure of table /FFMES/SKIP_MSG	32
Fig. 31: Example entry of table /FFMES/SKIP_MSG	32
Fig. 32: Flag Status logic act.	33
Fig. 33: Structure of table /FFMES/STATUS	34
Fig. 34: Example entry of table /FFMES/STATUS	34
Fig. 35: Example entry in table /FFMES/STDVAL	35
Fig. 36: Sample entries for /FFMES/STDVAL with assignment of different activity types for time confirmations on PO operations	36